

## RV Combination WASHER / DRYER

*The automatic washer-dryer has a capacity of up to 12 lbs. of dry clothing. It is front loading with an extra large door opening for easier access. Several wash and dry programs are available along with variable water temperature settings.*

- *The washer-dryer operates on 120 Volt AC from shore power or the generator.*
- *The washer-dryer will use approximately 12 to 20 gallons of water per wash cycle.*

*When installed, the washer drain will be connected to either the gray or black holding tank. When the black (solid waste water) holding tank is used, the drain valve should be opened to drain the washer water into the sewer drain before and during operation. The black tank drain valve should be closed when the washer is not in operation. When the gray (waste water) holding tank is used to drain the washer, the drain valve should be opened to drain the washer water into the sewer drain before operation. The gray tank drain valve can be left open when the washer is not in operation.*

*Before using the washer for the first time, determine which holding tank is being used:*

- *Empty all the holding tanks*
- *Close all holding tank valves and run washer for one cycle.*
- *Check the tank level monitor to determine which holding tank is connected to the washer drain.*
- *Drain the holding tank.*

**WARNING:** The manufacturer recommends that you open a window or vent while operating the dryer. The washer-dryer can create negative air pressure inside the RV that can accumulate Carbon Monoxide or LP-Gas while operating fuel-burning appliances and the washer/dryer at the same time.

**CAUTION:** It is recommended that you do not use the washer-dryer while the vehicle is in motion. Suspension movement, combined with the weight of the drum while in the wash cycle, can damage the internal components of the washer/dryer.

## To Prepare the Washer/Dryer for Use after periods of disuse:

- Wipe the inside and outside with a damp cloth to remove any travel dust that has accumulated.
- Make sure water supply lines are secure and fresh water valves are open.
- Connect to city water or turn on the water pump.
- Connect to shore power or start the generator.
- Connect the holding tank drain hose to the drain service and open the holding tank drain valve.
- Set the selector knob to **Reset**.
- Set the **Dry Timer** knob to 30 minutes.
- Push the **On/Off** button to **On**. Wait five seconds. The **Auto Dry** light should be on and the **Status** light will flash fast then slow.
- Set the selector knob to a wash cycle. Set **Wash Temp** knob to **Warm**. Water should begin flowing into the washer and the drum should rotate both directions.
- Set the selector knob to **Reset**. Wait five seconds.
- Set the selector knob to **Spin**. Water should drain and drum rotation should speed up.
- Set the selector knob to **Reset**. Wait five seconds.
- Set the selector knob to **Dry**. Dryer fan should begin and drum should rotate both directions.
- Set the selector knob to **Reset**. Wait five seconds.
- Set the **Dry Time** knob to zero. The **Auto Dry** light should go off.
- The door will unlock in two minutes or less. The **Status** light flashes fast then slow. The door should now open.
- Push the **On/Off** button to **Out (Off)** position. The **Status** light should be off.
- If applicable, close the holding tank drain valve.

## To begin a wash load:

- Sort and pre-treat clothes.
- Load the clothes loosely into the washer.
- Close the washer door.
- Turn the Wash Temperature knob to the desired temperature setting.
- Choose the desired washing cycle option using the Selector knob.
- Load wash tray with detergent. Add the measured amount of detergent suggested by the package directions (maximum two tablespoons).
- Turn the power ON.
- After the cycle is complete, wait two minutes for the door lock to release before attempting to open the door.
- If applicable, turn the power OFF and close the holding tank drain valve.